



20" INDUSTRIAL HIGH VELOCITY OSCILLATING PEDESTAL FAN

MODEL NO: **HVF20PO**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instruction
manual



Indoor use only


1. SAFETY

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey dealer.
If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

Electrical safety information, it is important that the following information is read and understood.

- 1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- 1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- 1.1.3. **Important:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.
 - × **DO NOT** pull or carry the appliance by the power cable.
 - × **DO NOT** pull the plug from the socket by the cable.
 - × **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or is replaced immediately by a qualified electrician.
- 1.1.4. This product is fitted with a BS1363/A 13 Amp 3 pin plug.
If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
Ensure that repairs are carried out by a qualified electrician.
Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.
 - a) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
 - b) Connect the BROWN live wire to the live terminal 'L'.
 - c) Connect the BLUE neutral wire to the neutral terminal 'N'.Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
Sealey recommend that repairs are carried out by a qualified electrician.
- 1.1.5. If an extension reel is used it should be unwound fully before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

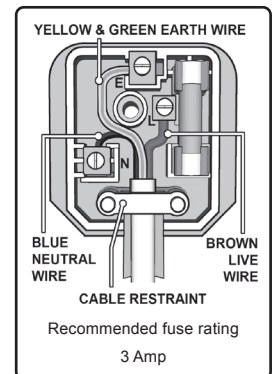

1.2. GENERAL SAFETY

- ✓ Disconnect the fan from the mains power when not in use, and before servicing or performing any maintenance.
- ✓ Use the fan in dry areas only. **DO NOT** use in wet or areas with high condensation such as showers, pools etc.
- WARNING!** If the fan falls into water or other liquid, switch off and disconnect from the mains power supply immediately. **DO NOT** touch the fan until the mains power supply has been disconnected.
- ✓ Always disconnect the fan from the power supply when moving it from one location to another and ensure fan stands on a level surface.
- ✓ The fan air flow is powerful. Before using ensure there are no materials or items that may be blown about by the stream of air.
- ✓ Keep the fan clean and maintained in good condition. For electrical components or motor service contact an authorised service agent.
- ✓ Use recommended parts only (unapproved parts may be dangerous, and will invalidate your warranty).
- × **DO NOT** operate the fan where there are harmful, explosive or flammable gases, fumes or hazardous substances.
- × **DO NOT** stand the fan on the electrical power cable.
- × **DO NOT** insert any objects through the fan guard.
- × **DO NOT** cover the fan when in use.
- × **DO NOT** immerse the fan in water or any other liquid.
- × **DO NOT** allow children to operate the fan.
- × **DO NOT** stand the fan where it may be knocked over or off a surface, or where the lead may cause a person to trip.
- × **DO NOT** use the fan outdoors.
- × **DO NOT** modify speed control or attempt to fit any additional external speed control device to the fan.
- ✓ When not in use cover the fan to protect from dust, and store in a safe, dry, childproof location.


NOTE: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. INTRODUCTION

High velocity fan suitable for movement of huge volumes of air. Features three-speed settings for choice of airflow, height adjustable stand, tilting blade cradle and oscillation. Fully guarded blades with large diameter base for safety and added stability. Suitable for industrial, commercial, Agricultural, workshop and showroom applications.

3. SPECIFICATION

Model no: HVF20PO
 Fan diameter: 550mm (20")
 Speeds: 3
 Speed range: 1050/1150/1350rpm
 Maximum airflow: 110m³/min (3900cfm)
 Height: 1080-1410mm
 Power: 110-115W
 Supply: 230V
 Current: 0.5A
 Maximum Flow Rate (F): 160.35m³/min
 Fan Power Input (P): 105.5W
 Service Value (SV): 1.52(m³/min)/W
 Standby Power Consumption (Psb): 0.0W
 Seasonal Electricity Consumption (Q): 33.76kWh/a
 Fan Sound Power Level (Lwa): 78.26dB(A)
 Maximum Air Velocity (c): 3.31m/s

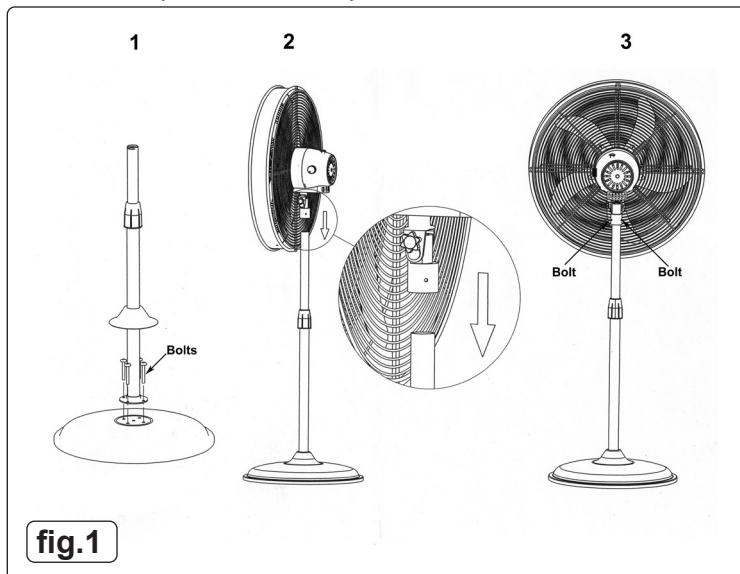

4. ASSEMBLY

- 4.1. Bolt the bottom tube to the base as in fig.1.1.
- 4.2. Place the fan head assembly on the upper tube (fig.1.2)
- 4.3. Secure the fan head assembly by means of the two bolts as shown in fig.1.3.
- 4.4. The height is adjustable by loosening the collar on the tube, sliding to the required height and retightening.
- 4.5. The angle of the head is adjusted by loosening the head clamp and moving the head and retightening the clamp.

5. OPERATION

IMPORTANT: Ensure that all safety instructions from section 1 have been read and understood before using the fan.

- 5.1. Set the fan on a level, dry surface.
- 5.2. Plug the power cord into the mains supply.
- 5.3. The fan features 3 speeds - selectable using the switch located at the back of the fan (fig.2.1.) The fan speed increases as the switch is turned in a clockwise direction.
- 5.4. To start the fan oscillating, press the control button (fig.2.2.) down, and lift to stop the oscillation.
- 5.5. When not in use, disconnect from power supply and store in a safe, dry, childproof location.



6. MAINTENANCE

IMPORTANT: Turn the control switch to OFF and disconnect the fan from the power supply before cleaning.

- 6.1. Use only a soft, damp cloth to clean the fan.
 - × **DO NOT** submerge the fan in water and NEVER allow water to drip into the motor housing.
 - × **DO NOT** use solvents or other chemicals to clean the fan.
- 6.2. To clean the fan blades, loosen the 7 clips around the guards and then lift off the front guard from the top hook.
- 6.3. Reassemble by hooking the front guard into place at the top of the rear guard and then push the 7 clips back into place so that they engage both the front and rear guards.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk