



# SUSPENSION STRUT SUPPORT

MODEL NO: **VS3847**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves



Wear safety footwear



Wear protective clothing

## 1. SAFETY



- ❑ **WARNING!** Wear approved eye protection. Wear appropriate Personal Protective Equipment. A full range of Personal Protective Equipment is available from your Sealey dealer.
  - ❑ **WARNING!** Ensure that Health & Safety, Local Authority Regulations and general workshop practice Regulations are adhered to when using tools.
  - ✖ **DO NOT** use tools if damaged.
  - ✖ Maintain tools to ensure that they are in an adequate condition for safe use and optimum performance.
  - ✓ Ensure that a vehicle that has been raised by a jack is adequately supported. Use axle stands.
  - ✓ Wear suitable clothing to avoid snagging. **DO NOT** wear jewellery. Tie back long hair.
  - ✓ Account for all tools, parts and components being used. **DO NOT** leave these in or near the engine.
  - ✓ Return tools to suitable storage after use.
  - ✖ These Instructions are provided as a guide only.
  - ✓ Always refer to the vehicle manufactures' service instructions or a proprietary manual to establish the correct procedure and data.
  - ❑ **WARNING!** The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations. The Operator/ user must apply caution and common sense (good practical sense).
- NOTE:** For stability the VS3847 must only be used in conjunction with a transmission jack with a minimum base size of 560mm x 570mm and a ram size of 30mm diameter.

## 2. SPECIFICATION

Model no. .... VS3847  
 Transmission jack ram size maximum..... Ø30mm  
 Transmission jack base size minimum .....560mm x 570mm

## 3. OPERATION

- 3.1. Fit the VS3847 fully onto the transmission jack ram and finger tighten the butterfly screws provided (fig.2).
- 3.2. Remove the hex bolts and the closing plate, fit the VS3847 around the suspension leg beneath the lower spring cup (fig.2).
- 3.3. Refit the closing plate, refit and fully tighten the hex bolts (fig.1).
- 3.4. Raise the transmission jack to support the suspension strut.
- 3.5. Remove the support by reversing the above operations.

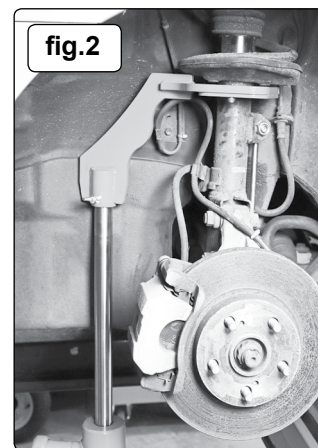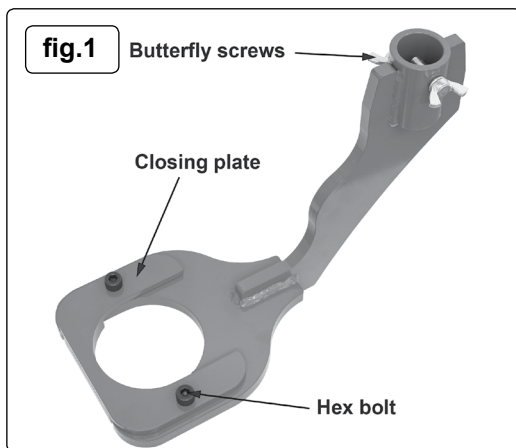

Parts support is available for these products. Please email [sales@sealey.co.uk](mailto:sales@sealey.co.uk) or telephone 01284 757500



**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR**



**01284 757500**



**01284 703534**



**[sales@sealey.co.uk](mailto:sales@sealey.co.uk)**



**[www.sealey.co.uk](http://www.sealey.co.uk)**