

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

1. SAFETY

- WARNING! DO NOT** exceed the recommended testing pressure for any water heating system or any component within that system.
- DO NOT** use this pressure tester for tasks it was not designed to perform.
- DO NOT** use equipment if damaged.
- Establish the correct testing pressure for the pipework/installation to be tested by referring to the system specification and/or the manufacturer's recommendations.
- Maintain the equipment in good and clean condition for best and safest performance.
- Wear approved eye protection.
- Wear suitable clothing.
- When not in use store in a safe, dry, childproof area.
- Systems that have been sealed off or modified for testing must be returned to their original state before the heating system can be used again



2. INTRODUCTION

Hand operated tester suitable for testing heating system integrity and locating leaks and blockages. Fast, simple and reliable operation. Water filter prevents ingress of debris into the heating system. Rugged construction features rubber bumper on pressure gauge and contoured pump grip.

3. SPECIFICATION

Model No:.....HSPT05
Capacity: 10L
Maximum Pressure:60bar

4. OPERATION

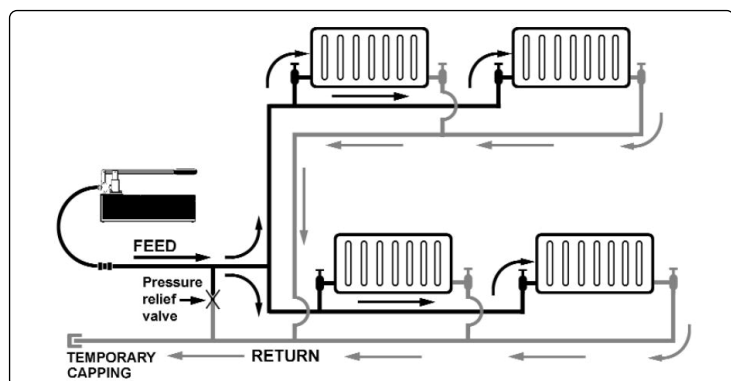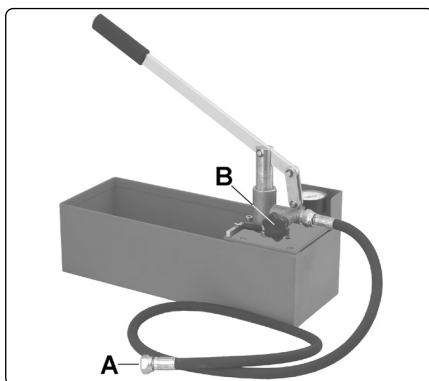

- 4.1. If you are not a trained plumber you must seek professional guidance from an approved plumber on the correct use of this product.
- 4.2. Establish the correct testing pressure for the pipework/installation to be tested by referring to the system specification and/or the manufacturers recommendations.
- 4.3. Any existing installations must be pressure tested in the OFF condition.
- 4.4. Any system to be tested must be temporarily sealed off in order for the test pressure to build up. When pressure testing is finished the system tested must be returned to its original design state before it can be used again.
- 4.5. If the system contains pressure relief valves these must be temporarily disabled if the system is to be tested over 3bar. After testing is complete the pressure relief valves must be reactivated.
- 4.6. The system to be tested must be fully water filled in order for the water pressure to build up.
- 4.7. Attach the flexible hose to the pump outlet.
- 4.8. Locate a suitable point on the system for connection and attach the other end of the hose to it. If necessary use an adaptor suitable for the female 1/2 inch BSP hose connection (A).
- 4.9. Unlock the pumping handle by holding it horizontal and sliding the locking bar out from beneath the pivot point.

- 4.10. Fill the reservoir with water and close the valve (B).
- 4.11. Commence pumping until the gauge registers the required pressure.
- 4.12. Leave the system pressurised for a period of time and observe the gauge. If the pressure drops there is a leak in the system and a visual inspection should be made.
- 4.13. When testing is finished open valve (B) to release the pressure and allow water to flow back into the reservoir.
- 4.14. Disconnect the tester from the system and reseal the point of connection.
- 4.15. Where a system has been temporarily sealed for testing ensure that the system is returned to its original condition.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk